

Keg Checker Instructions

Do's & Dont's to ensure your Keg Checker stays in calibration

- * Use the Keg-Checker on Flat, Hard and Level floor.
- * Ensure dispensing valve is fitted, this will then give an accurate reading.
- * Place the keg gently on the Keg-Checker's sensor.
- * The bottom rim of the keg must be pressed against the locating pins either side of the sensor. The rim should not have large dents.
- * **Don't drop the Keg-Checker on the floor.** This can effect the calibration/accuracy.
- * **Don't** drop the keg on the Keg-Checker with excessive force, this can effect the calibration/accuracy.
- * If your Keg-Checker does "fall" out of calibration or becomes damaged, please return the unit to Ambit Instruments Pty Ltd for recalibration or repair.
- * Ambit recommends that your Keg-Checker be returned every twelve (12) months for a calibration check.

